



CAM BALL QUICK START GUIDE

Your Safety and Security is our Business

Established 1991

BEFORE GETTING STARTED

1. **Charge the battery:** Connect the Camball Cam to a PC (USB port) using the included USB cable and charge for a minimum of two hours and thirty minutes
2. Insert Micro SD card into the external memory slot. Push the card all the way in until it is flush with the CamBall
3. Launch the CamBall Manager : Copy the CamballManager3.exe file from the CD to your PC and launch it from your PC by double clicking on it
4. Software upgrade will start automatically.
5. After upgrading, CamBall Manager will start the initial configurations (language, date/time, etc) process.

(Please refer to the manual under the Initial Configurations section for further details about the settings)

Using CamBall

1. Power the unit on by pressing and holding the Center button. All indication lights will blink in rotation 3 times as it powers on.
2. To power the unit off, press and hold the Center button. All indication lights will blink in rotation 3 times as it powers off.

CamBall Features (4 modes)

A. **Standby Mode** - During standby mode, REC, MP3 and TV indication lights are all turned off.

- If any of the REC, MP3 or TV indication lights are on, press and hold the corresponding directional button to turn the light off until all lights are off.

- From standby mode, press and hold a button that corresponds to Recording Mode, MP3 mode or TV mode to access that Mode



CAM BALL QUICK START GUIDE

Your Safety and Security is our Business

Established 1991

B. Snapshot Mode - From standby mode, press the Center Button to take snapshots. All lights will blink in rotation when you do this.

C. Video Recording Mode - From standby mode, press and hold the directional button near the REC light. The REC light will turn on and recording will start. If the REC light is in red+green, both audio and video is being recorded.

- To end recording, press and hold the directional button near the REC light and it will turn off and stop recording.

D. MP3 Player mode - If you have copied MP3 files from the PC to the CamBall's MP3 folder, you can listen to them through headphones included with the CamBall

- To put the CamBall into MP3 Player mode, from standby mode, press the directional button near MP3 until the light comes on. This will start playing your MP3 file.

- To stop playing MP3's , press and hold the directional button near the MP3 light until it turns off.

- Buttons in MP3 mode: Up (short press, not hold) volume up, Up (Long hold) folder selection Down (short press, not hold) volume down Left (short press, not hold) Previous track, Left (long hold) Playback mode selection Right (short press, not hold) Next track, Right (long hold) MP3 mode off

E. TV Mode - Connect the CamBall to a TV or LCD monitor using the USB cable

- From standby mode, press and hold the down button and the TV indication light will turn on and the menu system will display on the TV screen.

- From here you can use the menu system on the screen to navigate your options. To select a highlighted option, press the center button.



CAM BALL QUICK START GUIDE

Your Safety and Security is our Business

Established 1991

4. Playback and edit from a PC

A. Connect CamBall to a PC using the USB cable

B. When connected to a PC, the REC, MP3, TV and TYPE lights will turn on in a cross shaped configuration.

C. The PC will recognize the CamBall and generate two new temporary drive letters. The internal memory will be displayed as CamBall and the external memory will be displayed as "Micro SD Card". Internal memory may also be displayed as Removable Disk, depending on your PC configuration.

D. The internal memory disk contains a CONFIG folder, and the external memory (micro SD card) does not.

E. Video recordings are saved to the VIDEO folder of internal and external memory. Photo files save to the PHOTO folder and .mp3 files save to the MP3 folder.

F. You can play and edit the files using the StarEncoder program which can be found on the included CD.

www.Spycentre.com